

Operation



On the rear of the instrument:

- Main Switch on/off

Connection for


- Power Cable
- Foot Switch
- USB
- LAN



USB Port:

- For Memory Stick

Measure button

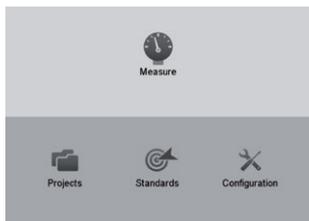


Main screen

- **Measure:**
Enter measurement mode
- **Projects:**
Manage saved data
- **Standards:**
Define test method and tolerance
- **Configuration:**
Calibration and Instrument settings

How to Calibrate?

Calibration is necessary at the first startup

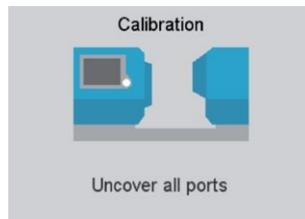


- Select **Configuration**
- Select **Calibrate Instrument**
- Follow screen instructions

How to measure?




- Select **Measure** on main screen
- Select test method on top
- Place sample at appropriate port
- Press Measure button
Average is shown on top row, single readings below

How to define test method and tolerance?

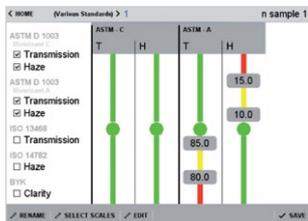

- Select Standards
- +NEW
- Input Name
- Select Scales
- Select number of measurements
- Edit tolerance
- Save

How to measure continuously?

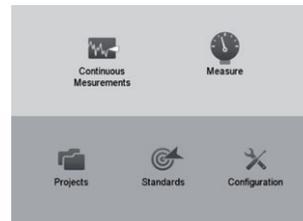

Continuous Mode:

- Select **Configuration**
- Activate **Continuous Measurements**
- Go back to main screen
- **Continuous Measurements** will be available

How to manage saved data in projects?



- Select **Projects**
- +NEW
- Input project name
- Load or create new standard
- Create new test series
- Add measurements
- Average will be saved

Overview Configuration

Calibration Instrument	Perform calibration
Set Date / Time	Set date, time and timezone
Continuous Measurements	Turn it on/off
Select Language	Select preferred language
Rotate Display	Set display: horizontal or vertical
Themes	Change color themes
LAN Settings	Network configuration
System Info*	Ser. No. / Cat. No. / Version

* Factory reset can be performed under System Info.
Please note that all standards will be deleted!