lease note detailed operating instructions on CD-ROM.


micro-wave-scan Operation



mode-wheel.

- Switch on press Show menu press
- scroll
- Select function

How to measure?

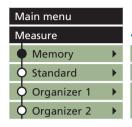

Select the desired "Measure" mode.

Measurement with statistics and auto-saving. Accuracy check on the reference tile.

Test procedures to be defined and downloaded via the smart-chart software.



operate-button:

Switch on, activate selected function and measure.

Memory Mode



Place instrument on sample


 Press and hold operate button, while moving the unit across the surface until the green light switches off.



Navigation Symbols:

- ← Back to previous menu
- ▶ Go to sub-menu
- ✓ Function activated
- Guide to language menu

Display of measurement results:

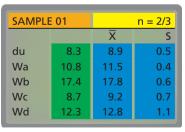

Sample-name Number of measurements Actual readings

 
Statistical data (for n>1)

BYK-Gardner GmbH · Lausitzer Strasse 8 · 82538 Geretsried · Germany · Tel. +49-8171-3493-0 · Fax +49-8171-3493-140 · www.byk.com/instruments



How to measure?


Organizer Mode



• Select the desired Organizer from the Measure menu



 Select additional identification parameters as e.g. color and paint line.

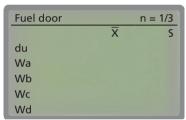

- · Perform measurement at the displayed checkzone.
- After a checkzone has been completed, press operate to advance to the next zone

 
How to create a new Memory?



· Open the Memory menu and activate Config. New. > A display appears to enter a new name




Select the Configuration of an existing memory.



- A menu appears which allows to change the configuration settings.
- Confirm the changes with

How to exit a measurement series?

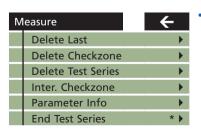

Press mode wheel to display a menu which allows deletion, interruption of a checkzone (=skip) or ending of a test series.

How to change settings?



• Open the Setup menu to view or change general instrument settings, such as: Language, date/time, switch-off time and beeper.

